

User Manual



IP55
WATERPROOF



52
RINGTONES



1000 feet
300 Meters



0-110dB
4 Levels

Features :

- Modern & stylish design
- Easy installation
- Approx 1000ft/300mtrs operation range(open air)
- 4 Levels of volume
- IP55 Waterproof
- 52 Ringtones
- Low power consumption


SPECIFICATIONS:

Working voltage of plug-in receiver	110-260V
Working temperature	-30°C-70°C / -22°F-158°F


PACKAGE LIST:

- Receiver
- Transmitter
- User manual

Product Diagram:

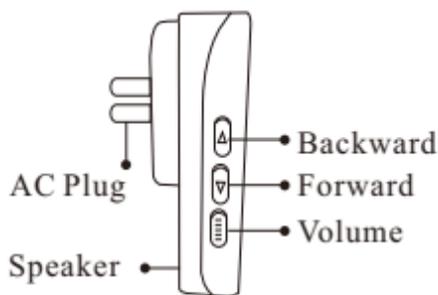

RECEIVER

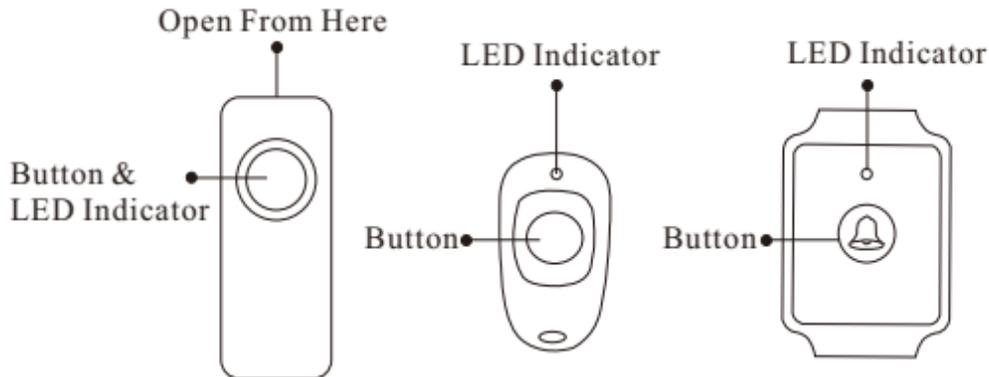

TRANSMITTER

THE FIRST USE GUIDE:

- 1.Plug in the receiver;
- 2.Press the transmitter push button, the receiver sounds and flashes.

CHANGING THE RINGTONE/PAIRING:

Step 1: Press the Backward [◀] or Forward button [▶] on the receiver to choose your favorite melody.

Step 2: Press and hold down the Volume button [🔊] on the receiver for 5 seconds until it makes a “Ding” sound and the receiver indicator flashes (that means the receiver entered into Pairing Mode which will only last 8 seconds, then it will automatically exit).


Step 3: Press the button on the transmitter quickly, it makes a “Ding-Dong” sound (or previous chosen melody from step 1) and the receiver indicator flashes.

Step 4: Press the button on the transmitter again to confirm whether the current ringtone is the one you have set, if yes, the pairing is completed.

Remark: This method is also suitable for adding/pairing additional transmitters.



Step 1

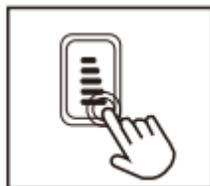

Step 2



Step 3-4

CLEARING THE SETTINGS

Press and hold down the Forward button [▷] (Middle button) on the receiver for 5 seconds until it makes a “Ding” sound and the receiver indicator flashes, all settings will be cleared. The receiver will back to factory default settings which means the ringtone you have set and the transmitters you have added/paired will be cleared.

INSTALLATION:

1. Place the transmitter exactly where you intend to fix or wear and confirm the receiver still sounds when you press the transmitter push button. If the receiver does not sound, maybe need to reposition the transmitter or adjust the distance between receiver and transmitter.

ADJUSTMENTS:

1. The volume of the receiver can be adjusted by press the Volume button [] on the receiver to increase the volume by one level. If the maximum level is already set, the receiver will switch to the minimum level.

2. The melody played by the receiver can be set by press the Backward [] or Forward button [] to select. Please refer to the “CHANGING THE RINGTONE” step.

CHANGING THE BATTERY:

1. Remove the exhausted battery and dispose of properly.

2. Insert the new battery into the battery compartment. Observe correct battery polarity (+ve and -ve), or the unit will not function and may be damaged.
3. Refit the transmitter to the cover.

PROBLEMS?

If the receiver does not sound, the following are possible causes:

1. The battery in the transmitter may be run down (the transmitter indicator will not flash). Replace the battery.
2. The battery may be inserted the wrong way round (polarity reversed). Insert the battery correctly, but be aware the reverse polarity may damage the unit.
3. Ensure that the receiver is switched on.
4. Check that neither the transmitter nor the receiver are near to possible sources of electrical interference, such as a power adaptor or other wireless devices.
5. The range will be reduced by obstacles such as walls, although this will have been checked during setup. Check that nothing, particularly a metal object, has been placed between the transmitter and the receiver. You may need to reposition the receiver.

CAUTIONS:

1. The receiver is for indoor use only. Do not use outside or allow to become wet.
2. There are no user-serviceable parts. Do not attempt to repair either the transmitter or the receiver by yourself.