

## Operating instructions




### A Preparation


#### Put into batteries Attention:

- According to the instruction of the player, put two batteries (AA) into it.
- When the batteries become weak or exhausted, please replace them with new ones.

### B Play tape

1. Set R/T switch on T (TAPE) play position;
2. Open tape drive and put in a tape;
3. Press ◀ PLAY ▶ button.

Function	Function (button)
Adjust volume	 VOLUME
Stop playing	 (STOP)
Fast *	
Change playing side	At playing, press DIR button.

⦿: When the speedup running of the tape comes to end, make sure to press STOP  button.

#### Choose reverse mode

Please set REVMODE button according to the following instructions.

→ Play each side once. When it plays to the beginning of the other side, stop playing.

↔ Repeat playing both sides.

### C Tune in on broadcasting

1. Set R/T switch on R (Radio) to play
2. Press AM or FM button.
3. Turn TUNING button, and turn to the desired frequency.

#### Turn off the radio

Set R/T switch on T (TAPE) play position.

### Improve broadcasting receiving

When listening in FM program, please extend the antenna and change its direction.

Earphone wire (antenna)

When listening in AM program, please change the player's direction.

### D Recording

#### Recording with radio

1. Set R/T switch on R (RADIO) receiving position .
2. Open tape drive and put in a tape.
3. Press AM or FM button.
4. Turn TUNING button, and turn to the desired frequency.
5. At the same time, press ◀ PLAY ▶ button/REC ● button to record.

#### Stop recording

Press (STOP)  button.

#### Recording with microphone

1. Set R/T switch on T (TAPE) play position.
2. Open tape drive and put in a tape.
3. At the same time, press ◀ PLAY ▶ button/REC ● button to record.

#### Stop recording

Press (STOP)  button.

### E Attentions:

#### About battery

- If you will not use Walkman for a long time, please take out the battery in case of battery leakage or corrosion.

#### About outer power supply

- If you keep using DC-in-jack for a long time, please take out the battery in case of damaging the player.

#### Operation notes:

- If you haven't used the player for long time, please first set it on playing state to warm up before putting in a tape.
- You'd better not use the tape lasting over 90 minutes, since the tape is very thin and easy to be lengthened, resulting in trouble or worsening its acoustical quality.

#### Receiving notice

- The radiation of some electrical players, such as TV, daylight lamp, thyristor table lamp, computer, and electrical motor, will seriously interfere the player. When using the player please avoid the interference.

### Notes when wearing a headphone/earphone:

#### Prevent damaging your hearing

Do not use headphones or earphones at a high volume or wear it long time, as it may damage your hearing. If tinnitus occurs, please reduce its volume or stop using it.

#### Friendly to others:

Please keep it at a proper volume, so that you can listen outside and will not disturb others.

### F Maintenance

#### Clean magnetic head and tape passage:

Every 10 hours of playing, please clean magnetic head and tape passage with a cotton swabs and cleaning solution available from market. After cleaning, please put in a tape when that part becomes dry.

#### Clean the cover

Please clean it with soft cloth with moderate cleanser. Do not use strong solvents, such as alcohol, gas, or thinner.

### G Specification

#### Frequency scope

AM: 520 - 1710KHz

FM: 87 - 108MHz

#### Requirements on power supply

- Two um-3 batteries (AA model):DC 1.5V \* 2

#### Accessories

- Stereophonic headphone (1)

## MAINTENANCE

To obtain the best performance from your player, clean the recording-playback heads and pinch rollers regularly. If these parts become dirty, the sound quality of your recordings may be altered and the tape speed may be modified.

1. Open the cassette door.
2. Press the play button (9).
3. Using a cotton bud soaked in a special cleaning fluid or spirit, clean the playback and recording heads carefully until all traces of dust or magnetic oxide has disappeared. Clean the surface of the pinch rollers and capstans in the same way.
4. Dry by wiping the recording and playback heads carefully using a soft cloth.

## TECHNICAL INDEX

1. Voltage: DC 3V (1.5V, AAX2PCS)
2. Frequency range: AM: 520-1710KHz FM: 87-108MHz
3. Rated Power: 500mW
4. Unit size: 121(L)x44(W)x91(H)mm
5. Unit weight: 237g (without battery)

## RF ENERGY EXPOSURE AND PRODUCT SAFETY GUIDE



ATTENTION!

Before using this radio, read this guide which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.

### Local Government Regulations

When radios are used as a consequence of employment, the Local Government Regulations requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your Reteless radio has a RF Exposure Product Label. Also, your Reteless user manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.

### Unauthorized modification and adjustment

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority granted by the local government radio management departments to operate this radio and should not be made. To comply with the corresponding requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services.

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the local government radio management departments equipment authorization for this radio could violate the rules.

### FCC Requirements:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CE Requirements:

- (Simple EU declaration of conformity) Henan Eshow Electronic Commerce Co.,Ltd declares that the radio equipment type is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and the ROHS Directive 2011/65/EU and the WEEE Directive 2012/19/EU; the full text of the EU declaration of conformity is available at the following internet address: [www.retekess.com](http://www.retekess.com).
- Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.



### IC Requirements:

Licence-exempt radio apparatus

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### RF Warning Statements

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### RF Exposure Information

- DO NOT operate the radio without a proper antenna attached, as this may damage the radio and may also cause you to exceed RF exposure limits. A proper antenna is the antenna supplied with this radio by the manufacturer or an antenna specifically authorized by the manufacturer for use with this radio, and the antenna gain shall not exceed the specified gain by the manufacturer declared.
- To avoid interference, turn off the radio in areas where signs are posted to do so.
- DO NOT operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites.

### Avoid Choking Hazard



Small Parts. Not for children under 3 years.

### Protect your hearing:



WARNING

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss

Note: Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's volume, the less time is required before your hearing could be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect.

### Approved Accessories



WARNING

- This radio meets the RF exposure guidelines when used with the Reteless accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the RF exposure guidelines and may violate regulations.
- For a list of Reteless-approved accessories for your radio model, visit the following website: <http://www.Retekess.com>

EU Importer  
Name: Germany Retevis Technology GmbH  
Address: Uetzenacker 29,38176 wendeburg